




Section along Centerline

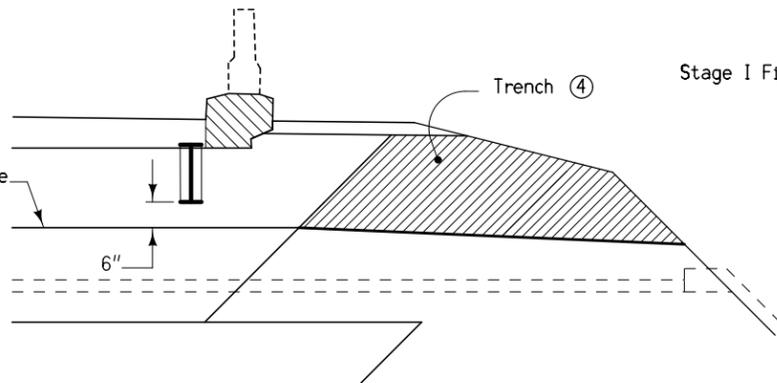

Detail B (Beam Bridge)

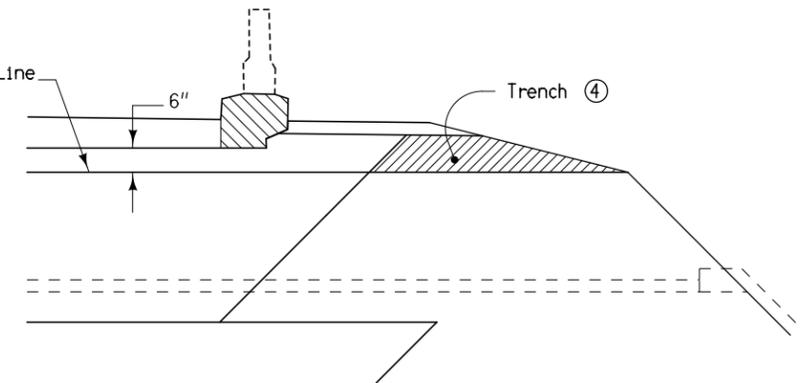

Detail B (Slab Bridge)

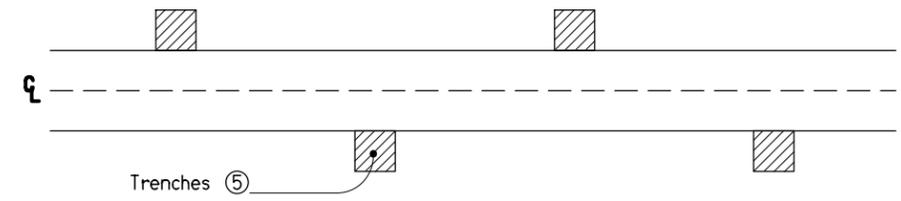

Trench Layout

Denotes pay limits for flowable mortar  
Denotes pay limits for flooded backfill

- ① 4" Subdrain at flowline elevation of culvert with 4" cover of porous backfill.
- ② Place Flange Filler Material to fill pocket area between flanges to prevent flowable mortar from building up. Flange Filler Material is incidental to flowable mortar.
- ③ Fill void with the maximum amount of Floodable Backfill possible. Distance from Floodable Backfill to bridge beams (when present) or bridge deck shall not exceed 5'.
- ④ Cut trenches in the soil plug to provide drainage for the flowable mortar. Backfill the trenches with open graded crushed stone, gravel, or recycled PCC to allow water to drain. Backfill material is incidental to flowable mortar.
- ⑤ Place trenches at 20' spacing with a minimum of two trenches on each side of the roadway.

**FILL FOR CULVERT USED IN BRIDGE REPLACEMENTS**