6115
11-10-92

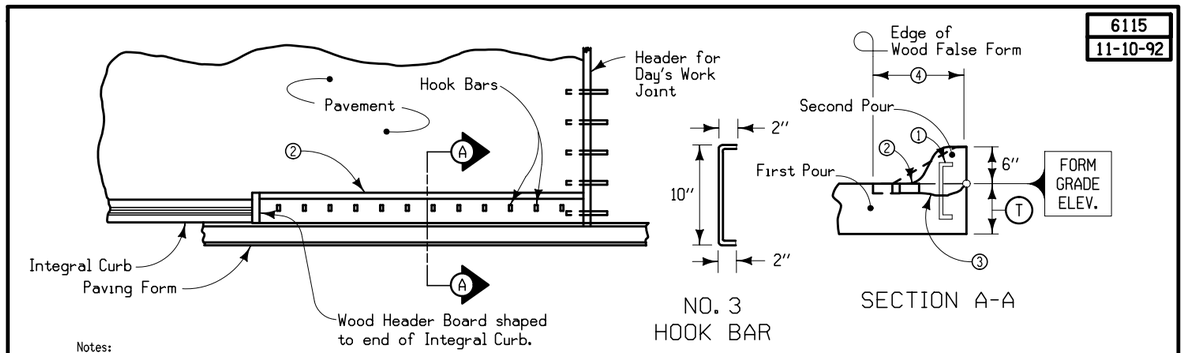

Notes:

1. Install hook bar at 12" intervals with top projecting so as to clear the paving equipment and as near the false form board as possible to maintain 2" surface clearance.
2. 2" x 4" False Form.
3. Excavate a slight cavity in concrete around each bar.
4. 12" maximum for Standard 6" Curb.
   16" maximum for Sloped 6" Curb.

CONSTRUCTION WHERE CURB IS OMITTED AT END OF DAY'S RUN