
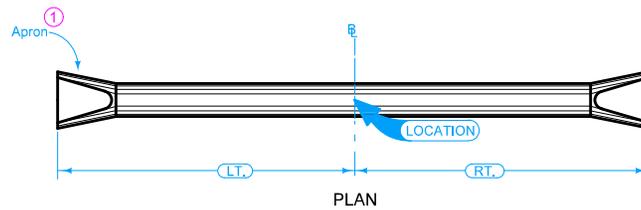


℄ is C of roadway, dike, survey, or other as detailed on plans.

Skew angle is the angle which one end of the pipe is ahead (by stationing) of line perpendicular to the ℄.
(Example: skew Rt. ahead 30 degrees)

① See DR-201 for concrete, DR-203 for metal.

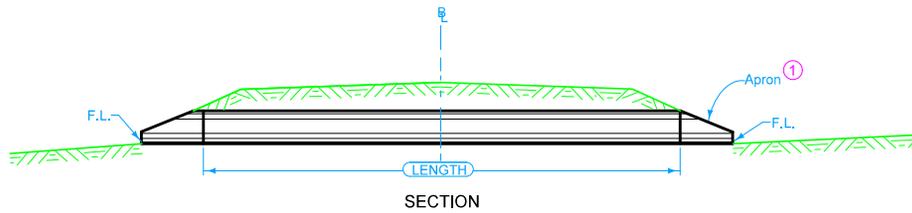

Possible Tabulation:
104-3

	REVISION	
	1	10-20-15
STANDARD ROAD PLAN		DR-601
		SHEET 1 of 1
REVISIONS: Extended dimension lines on plan view.		
 APPROVED BY DESIGN METHODS ENGINEER		
REINFORCED CONCRETE PIPE CULVERT		