
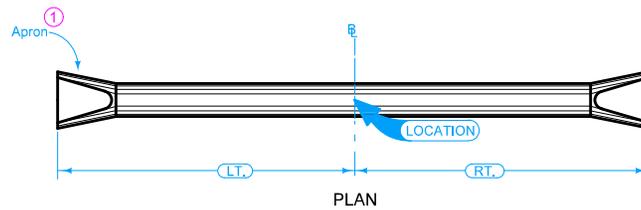


℄ is ℄ of roadway, dike, survey, or other as detailed on plans.

Skew angle is the angle which one end of the pipe is ahead (by stationing) of line perpendicular to the ℄.
(Example: skew Rt. ahead 30 degrees)

① See DR-201 for concrete, DR-203 for metal.

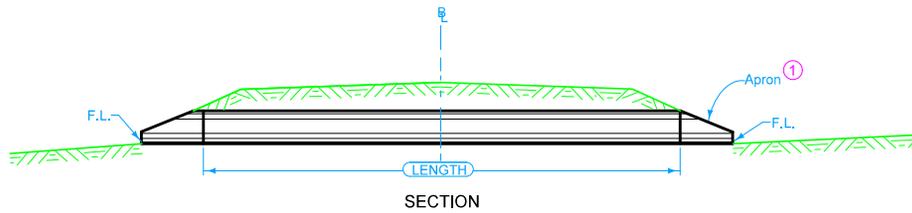

Possible Tabulation:
104-3

	REVISION	
	1	10-20-15
STANDARD ROAD PLAN	DR-651	
	SHEET 1 of 1	
REVISIONS: Changed picture to an RCP.		
 APPROVED BY DESIGN METHODS ENGINEER		
UNCLASSIFIED PIPE CULVERT		