



PLANTING PIT
(Bare Root Plants)

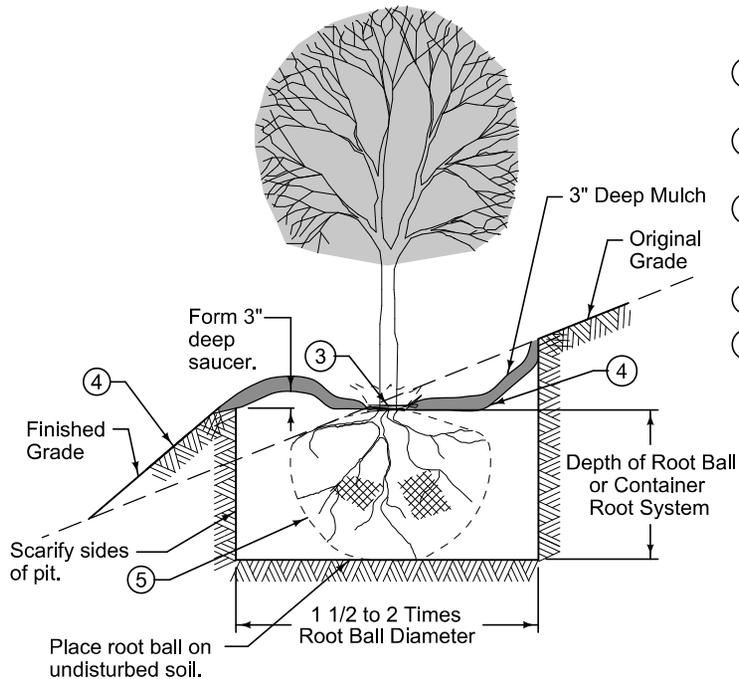

PLANTING PIT
(On Slopes)

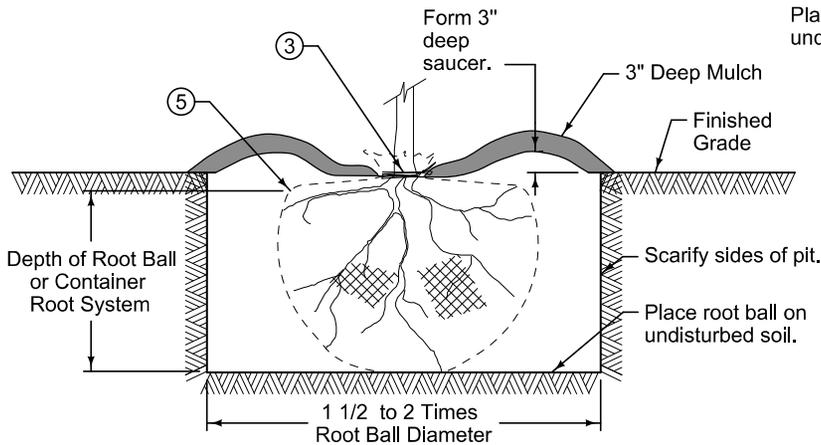

PLANTING PIT
(Balled and Burlapped Plants)

- ① Spread root system in natural position with soil excavated from pit.
- ② Over-excavate 6 inches. Place 6 inches of loose soil in pit prior to planting.
- ③ Install with root collar at or slightly above grade. Do not place mulch within 2 inches of trunk.
- ④ Begin transition at edge of root ball.
- ⑤ Cut and completely remove all twine, burlap, and wire baskets from root ball prior to placing backfill material.

	REVISION
	New 10-18-11
	9030.101
SHEET 1 of 1	

SUDAS Standard Specifications

PLANTING PIT