


Provide a minimum concrete cover to near reinforcement of 1 1/2 inches. Provide 3 inches minimum cover at the ends of bars.

- 2 Excavate and place backfill material as necessary.
- 3 Provide 3 inch diameter weep holes at 8 foot intervals. Install rodent guards in weep holes. Align bottom of weep hole with top of subdrain.
- 4 Additional 12 inch width is adjacent to wall.

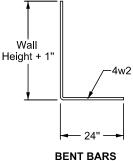

REINFORCING BAR LIST							
Wall Type	Mark	Size	Shape	Length	Spacing		
Type A	4w1	4		Variable	15"		
	4w2	4	L	Variable	14"		
Туре В	4w3	4	_	Wall Height + 18"	14"		
	4w4	4	_	Variable	15"		
	4w5	4	_	3'-10"	14"		

SUDAS	<b>@</b> IOWADOT	REV 2	ISION 10-20-15			
	GURE 9072.221 STANDARD ROAD PLAN		MI-221 SHEET 2 OF 2			
REVISIONS: Replaced DOT and SUDAS logos with new versions.						
Paul D. Wigard Brian Smith SUDAS DIRECTOR DESIGN METHODS ENGINEER						
COMBINED RETAINING						
WALL - SIDEWALK						