


- ① Extend tracer wire up fire hydrant barrel to internal terminals of tracer wire station and back down. Refer to WM-201 for details of fire hydrant assembly.
- ② Clamp tracer wire to ground rod at system termination points.

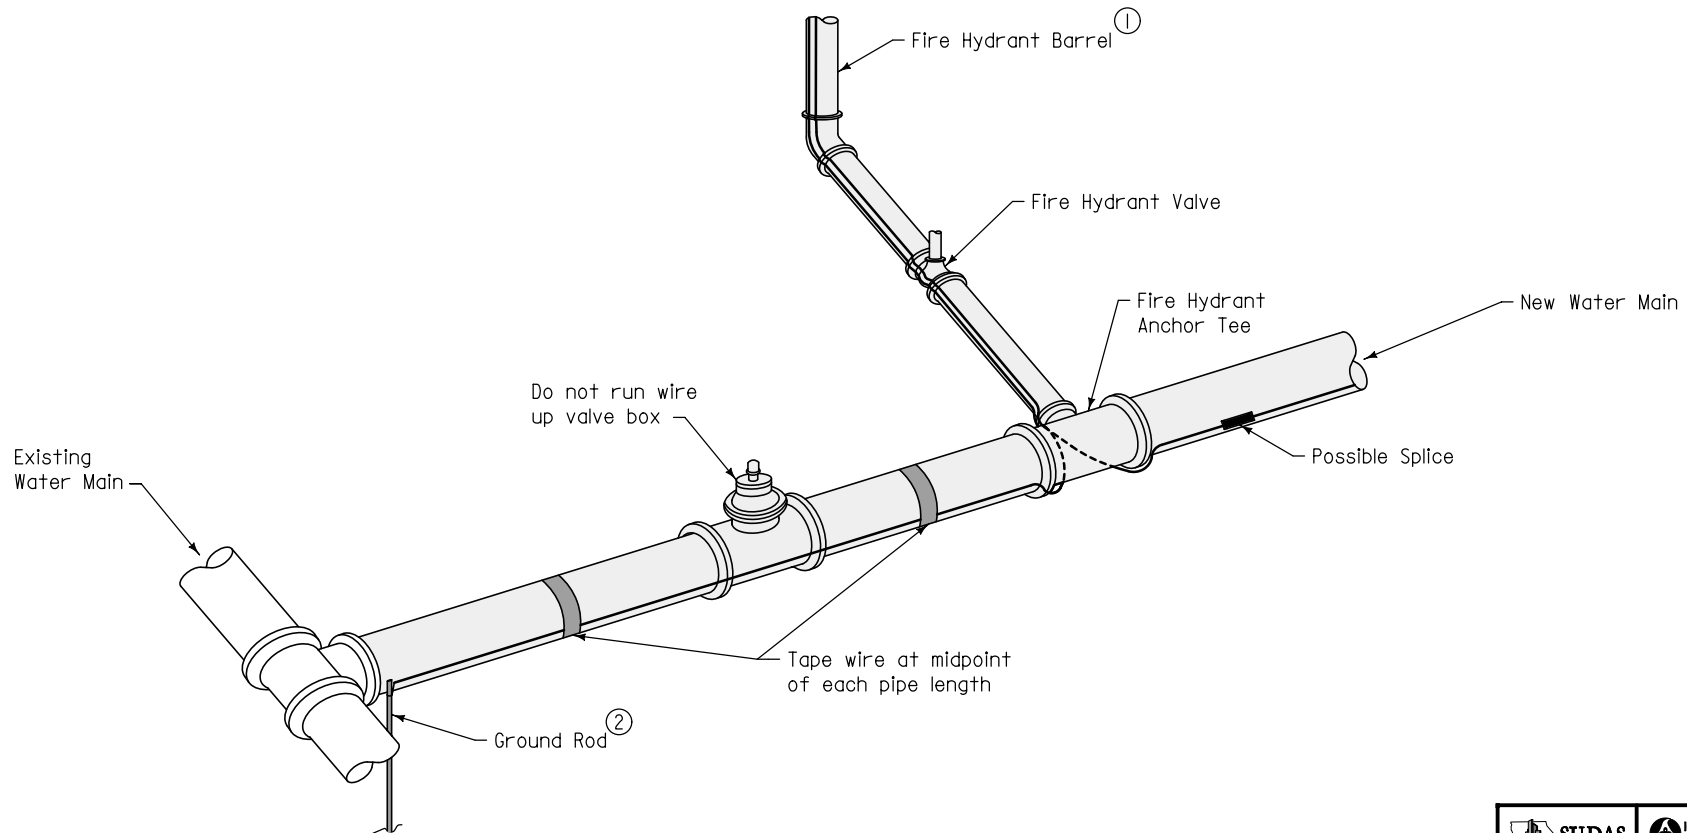

TYPICAL INSTALLATION

 SUDAS		 Iowa Department of Transportation		REVISION	
				NEW	04-21-09
FIGURE 5010.102		STANDARD ROAD PLAN		WM-102	
				SHEET 1 of 1	
REVISIONS: New. Replaces SUDAS Figure 5010.3					
 SUDAS DIRECTOR		 DESIGN METHODS ENGINEER			
TRACER SYSTEM					