



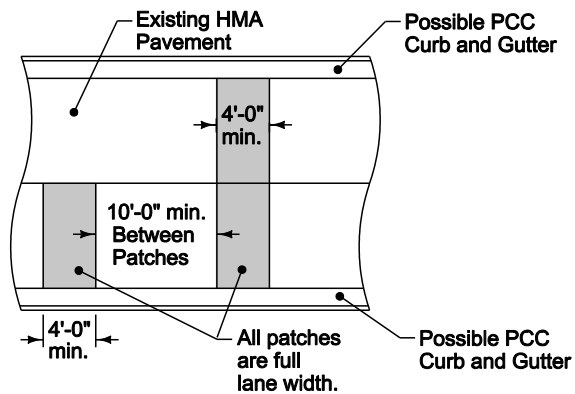

HMA PATCHES

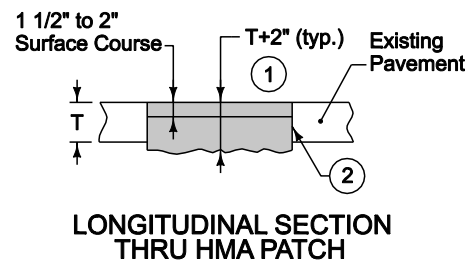

- ① When subgrade or subbase material is required below patch, bring material to bottom of pavement and match existing patch thickness.
- ② When removing pavement, saw to full depth or 10 inches, whichever is less.

 SUDAS	REVISION	
	New	10-19-10
	7040.103 SHEET 1 of 1	
SUDAS Standard Specifications		
FULL DEPTH HMA PATCHES		