


# Longitudinal Joint Orientation

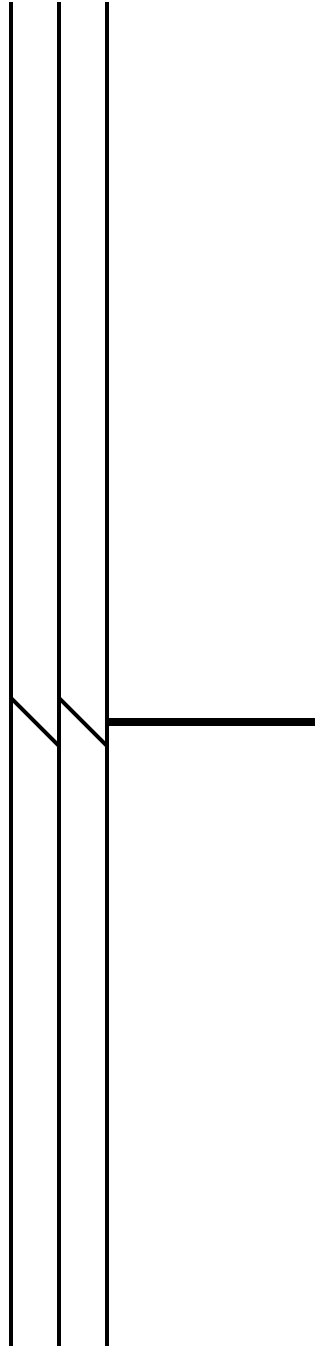

Locate edge of lift directly over existing centerline. Materials forming the 1:1 wedge to extend onto adjacent lane.

1:1 Edge (Approximately)



The contractor is responsible for laying uncompacted widths and depths to provide the design cross section after compaction.

