


- ① Extend tracer wire up fire hydrant barrel to internal terminals of tracer wire station and back down. Refer to WM-201 for details of fire hydrant assembly.
- ② Clamp tracer wire to ground rod at system termination points.

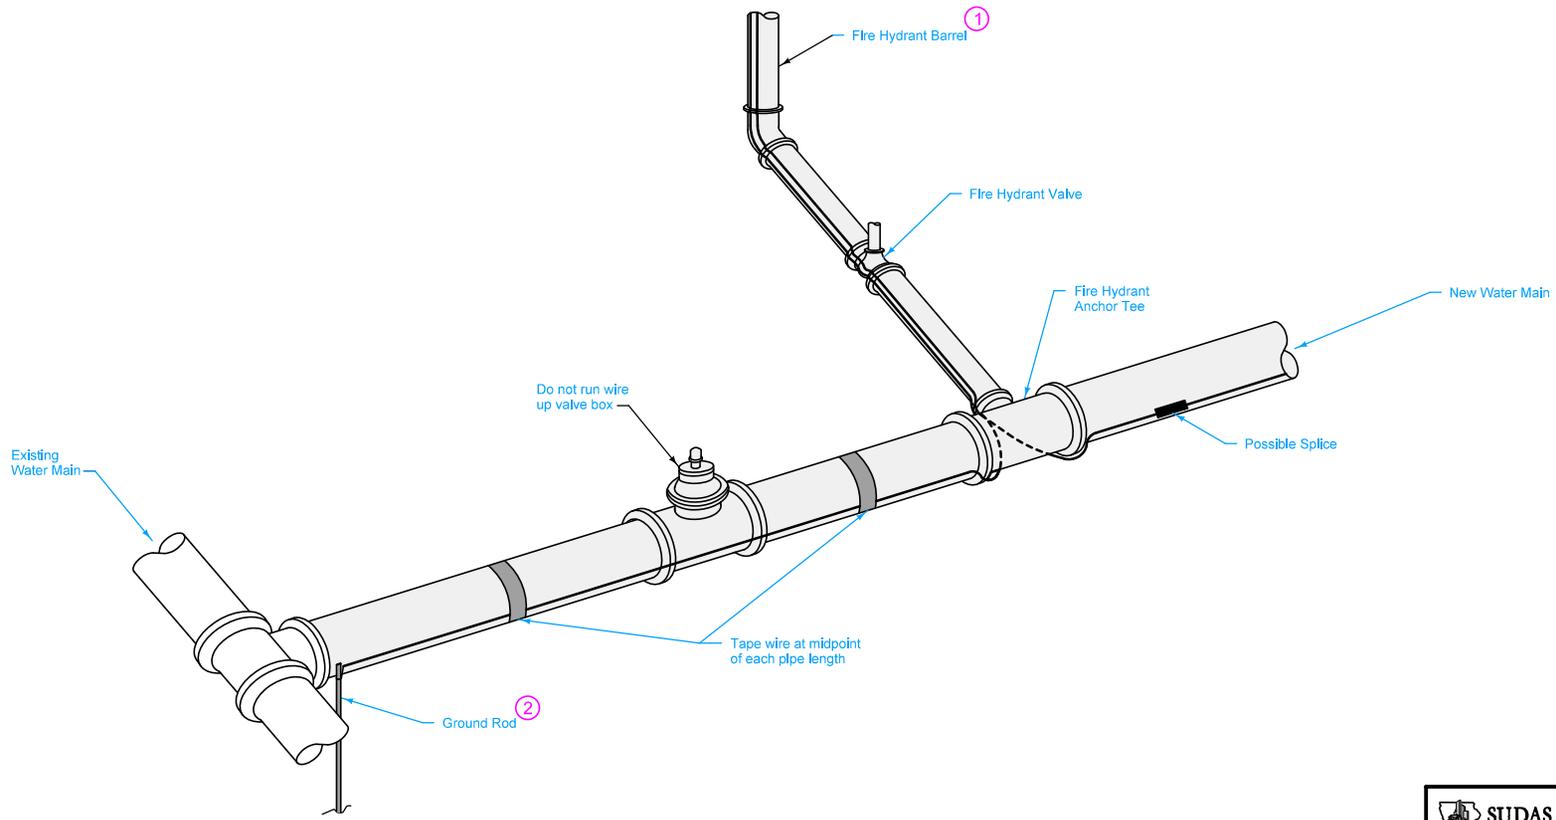

TYPICAL INSTALLATION

FIGURE 5010.102 | SHEET 1 OF 1

SUDAS	IOWADOT	REVISION	
		1	10-18-16
FIGURE 5010.102	STANDARD ROAD PLAN	WM-102	
		SHEET 1 of 1	
<small>REVISIONS: Replaced Iowa DOT and SUDAS logos with new logos.</small>			
 <small>PAUL D. WIGAND</small> <small>SUDAS DIRECTOR</small>		 <small>BRIAN SMITH</small> <small>DESIGN METHODS ENGINEER</small>	
TRACER SYSTEM			