



Refer to [EC-101](#) for Special Ditch Control (Wood Excelsior Mat).

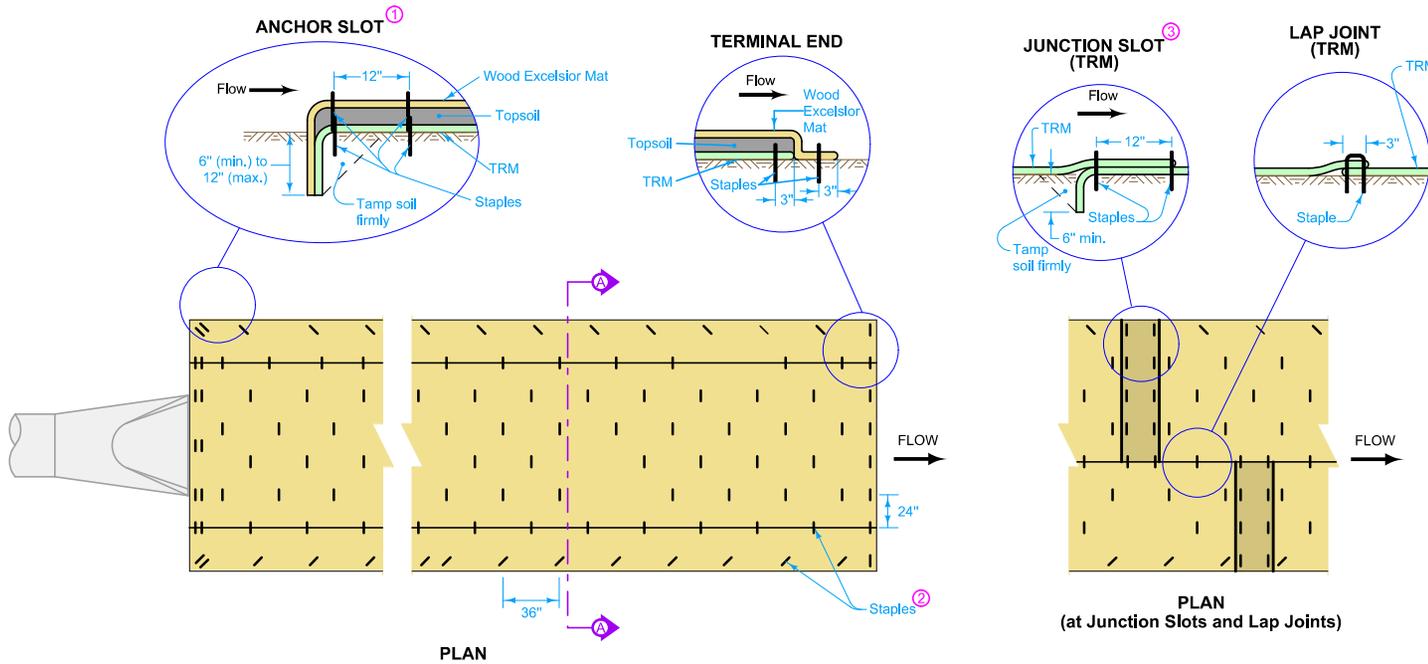

- ① Install anchor slot at the beginning (upstream end) of all mat installations.
- ② Place staples alternately in rows approximately 24 inches apart. Approximately 30 staples required per square (100 sq. ft.) of each type of mat.
- ③ Stagger Junction Slots.

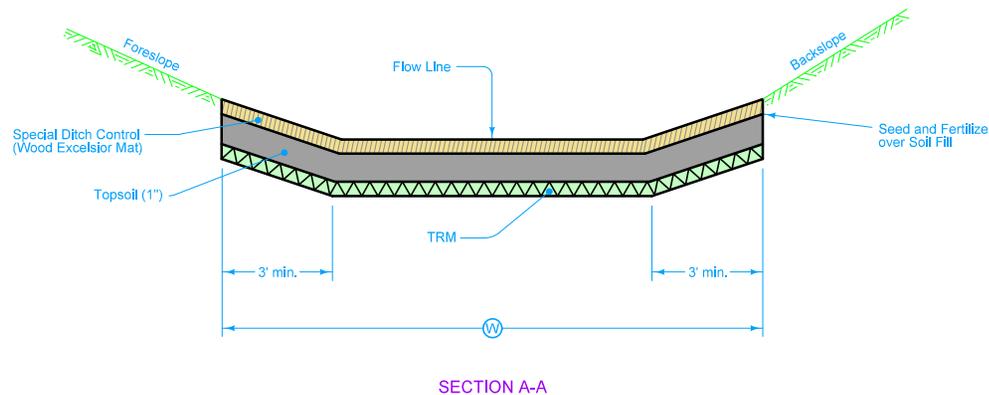

TRM
 Wood Excelsior Mat

Possible Contract Items:
Turf Reinforcement Mat

Possible Tabulation:
100-22

	REVISION
	3 04-17-18
STANDARD ROAD PLAN	EC-104
SHEET 1 of 1	
REVISIONS: Added Designer Info button.	
APPROVED BY DESIGN METHODS ENGINEER	
TURF REINFORCEMENT MAT (TRM)	