


Step 1

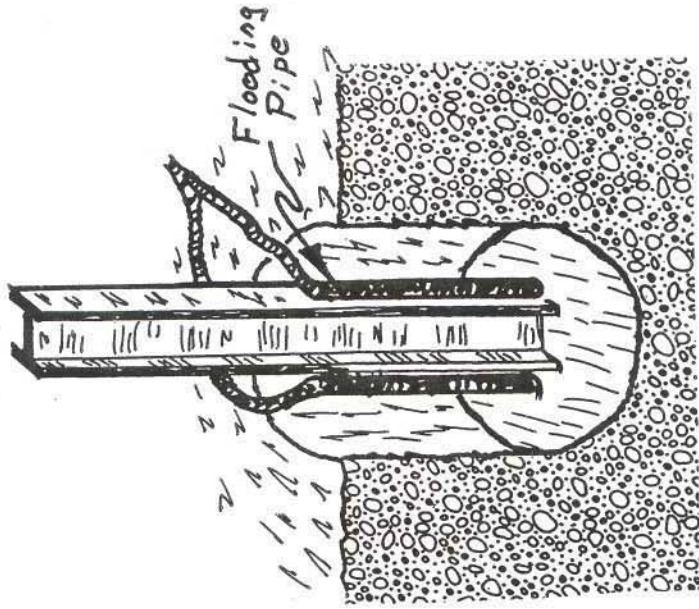


Insert down-hole
flooding Pipes

Step 2




Fill hole about
 $\frac{1}{2}$ full of
bentonite chips

Step 3

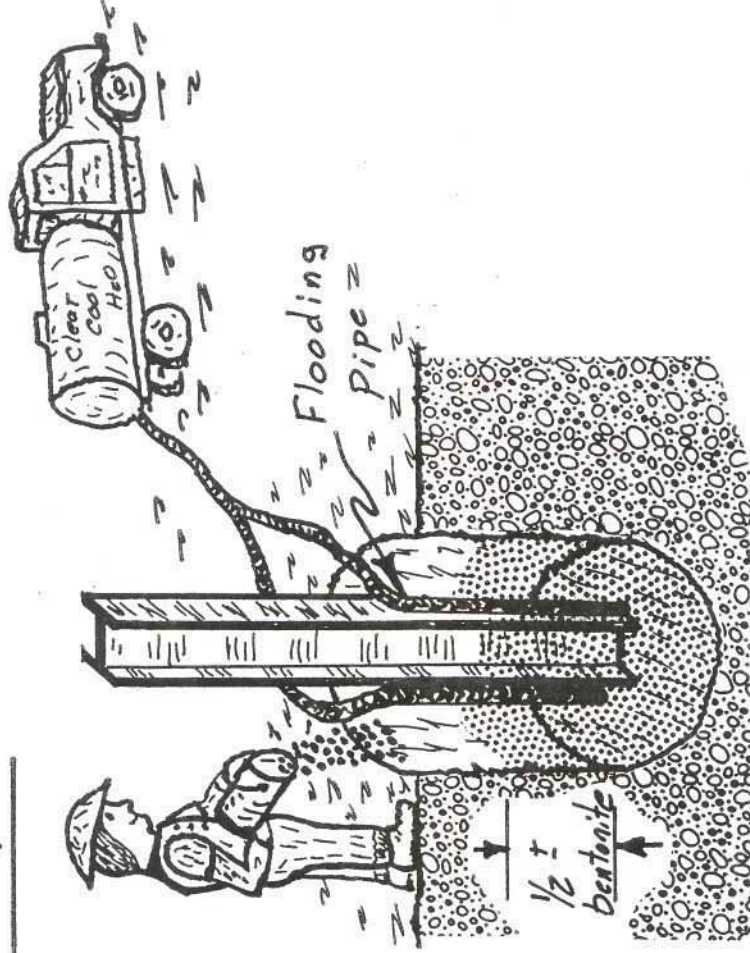


Flood bentonite
with water. Wait
about 20 min. Move
pipes up & repeat.

Step 1

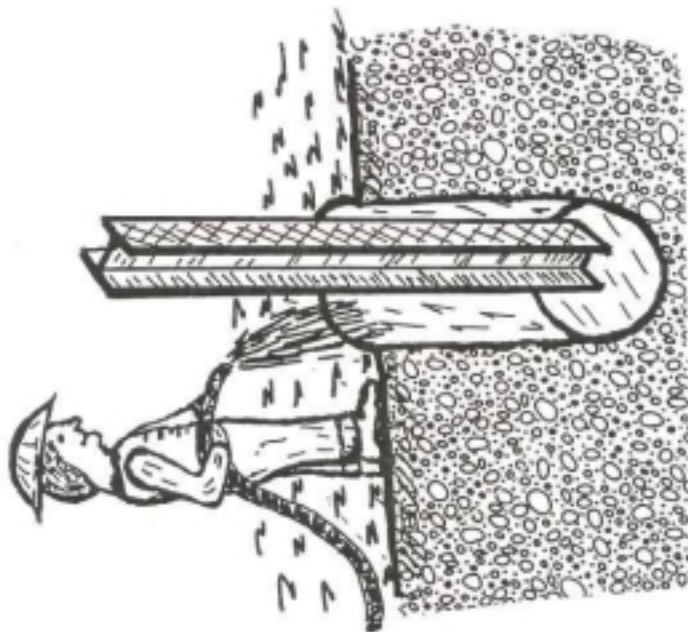

Fill hole
about $\frac{1}{2}$ full
of water

Step 2

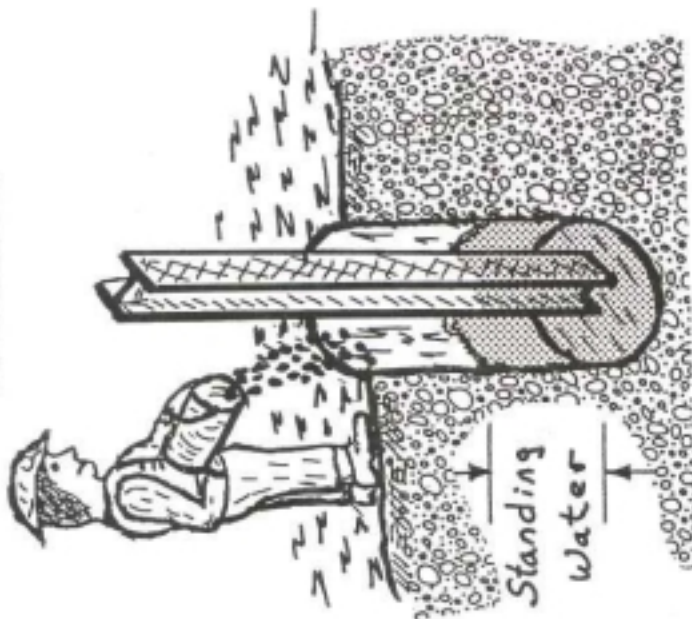

Fill hole about
 $\frac{1}{2}$ full of bentonite.
Allow about 20 min.
before continuing.