


- ① Extend tracer wire up fire hydrant barrel to internal terminals of tracer wire station and back down. Refer to WM-201 for details of fire hydrant assembly.
- ② Clamp tracer wire to ground rod at system termination points.

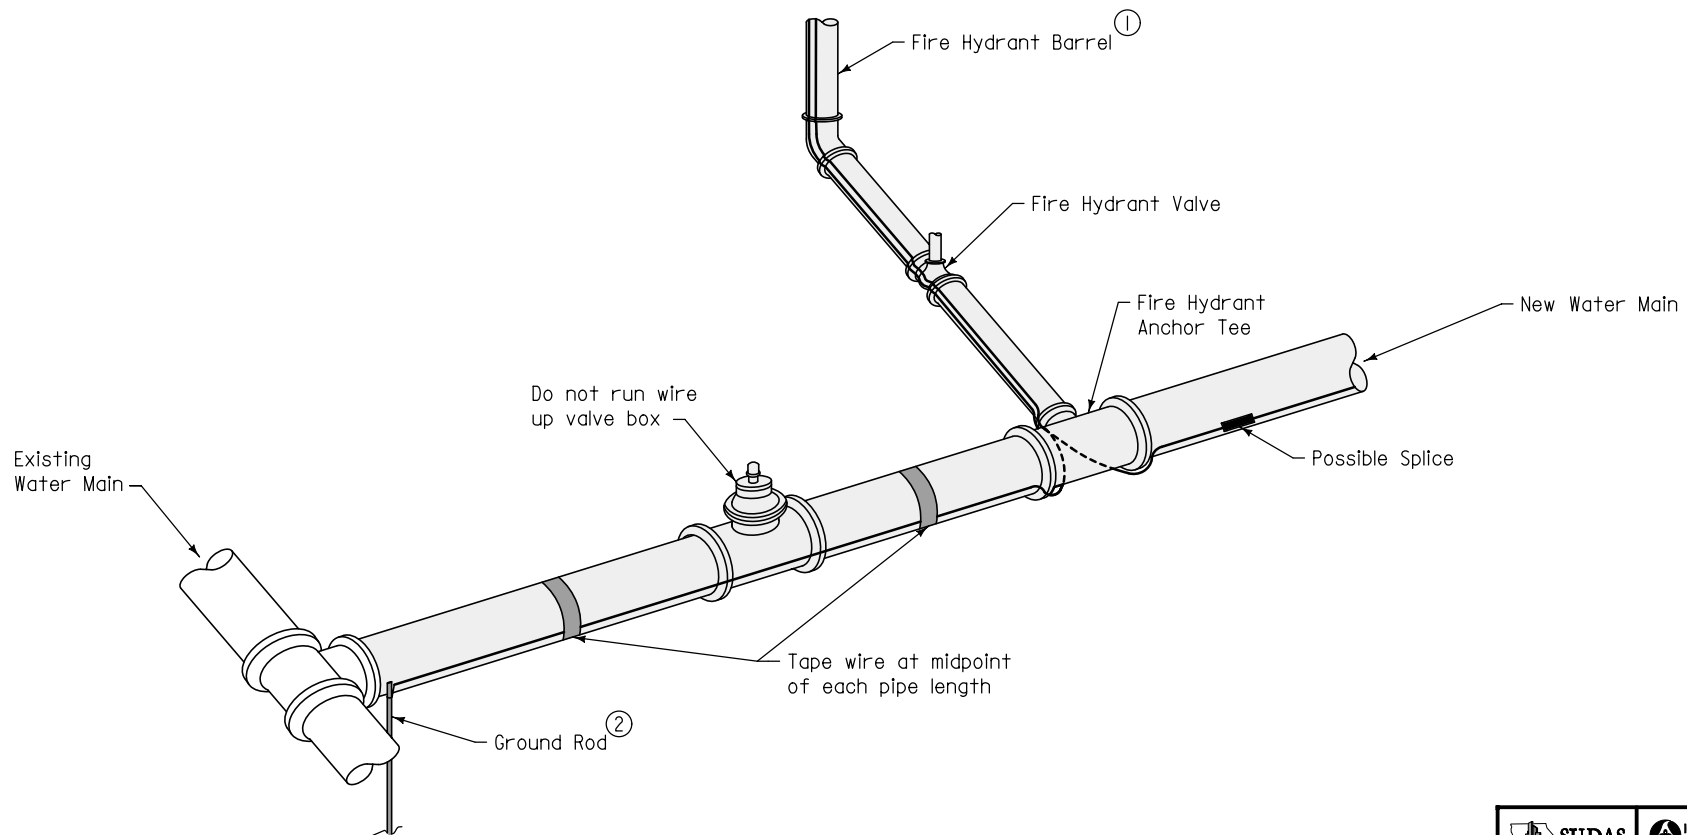

TYPICAL INSTALLATION

 SUDAS	 Iowa Department of Transportation	REVISION		
		NEW	04-21-09	
FIGURE 5010.102		STANDARD ROAD PLAN	WM-102	
			SHEET 1 of 1	
REVISIONS: New. Replaces SUDAS Figure 5010.3				
 SUDAS DIRECTOR		 DESIGN METHODS ENGINEER		
TRACER SYSTEM				