




1. Place slope drain on undisturbed soil or well-compacted fill.
2. Carefully compact cohesive soils around inlet end of the drain in 6 in. lifts.
3. Discharge slope drain to a stable outlet or to a sediment retention device.
4. Provide pipe and aprons of diameter specified.

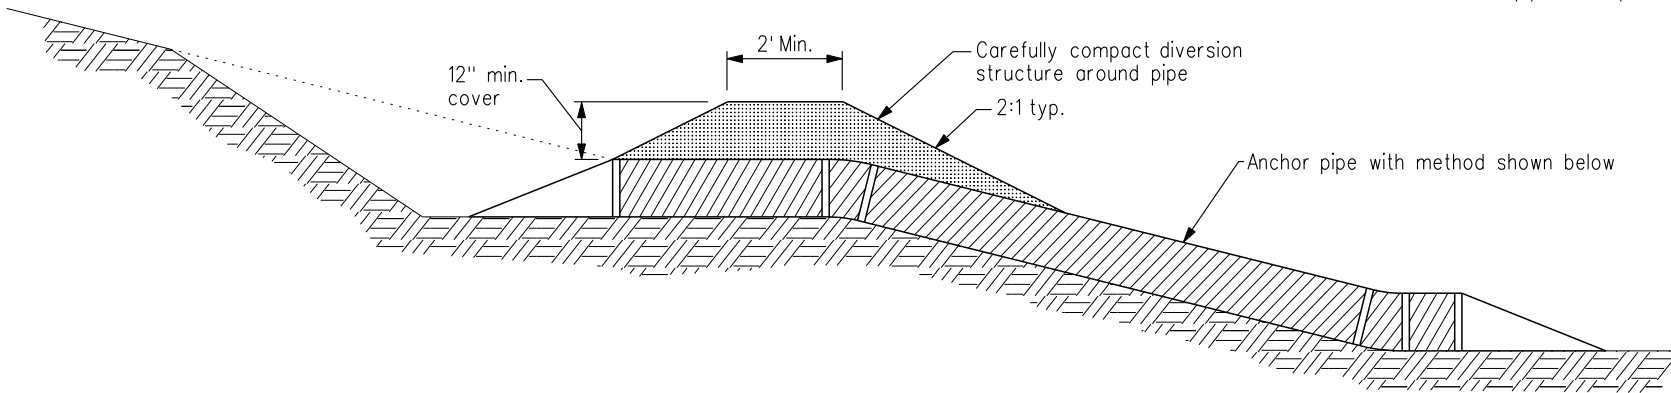


Place and compact fill along sides of pipe

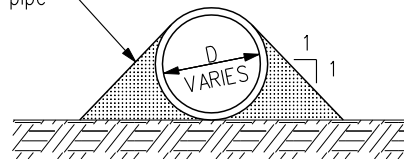

OPTION A

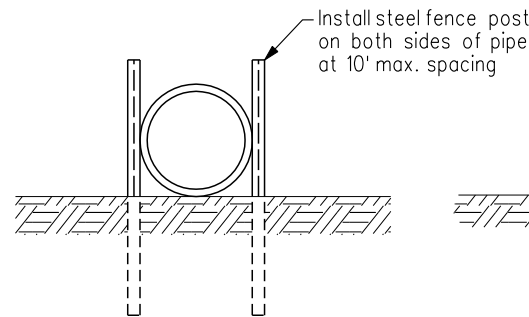

OPTION B

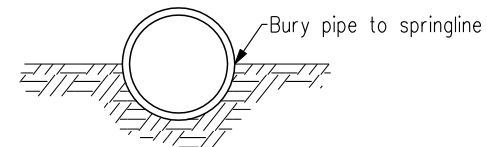

OPTION C

(May also be combined with options A or B)

SLOPE DRAIN ANCHORING OPTIONS

(Options A, B, & C are interchangeable unless specified)

 SUDAS	REVISION	
	NEW	10/17/06
	FIGURE 9040.12	
	SHEET 1 OF 1	
TEMPORARY PIPE SLOPE DRAIN		