



- ① Shape top 11 inches with forms.
- ② Bolt spacing and conduit locations as specified by the manufacturer.
- ③ Provide apron on three sides of cabinet if cabinet has front and back doors.

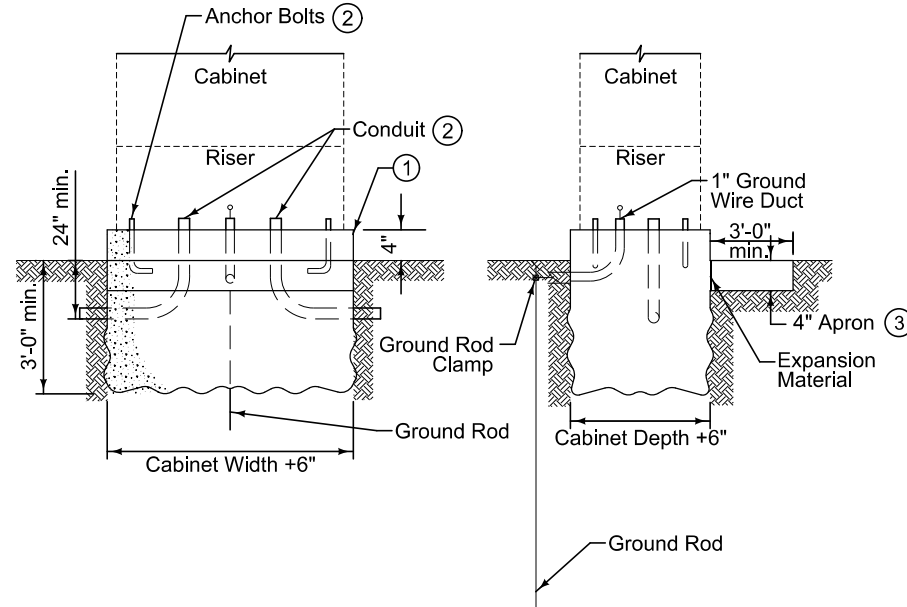

	REVISION
	1   2022 Edition
	<b>8010.101</b>
SHEET 1 of 1	
SUDAS Standard Specifications	
<b>CABINET FOOTING DETAILS</b>	