


- ① Extend tracer wire up fire hydrant barrel to internal terminals of tracer wire station and back down. Refer to WM-201 for details of fire hydrant assembly.
- ② Clamp tracer wire to ground rod at system termination points.

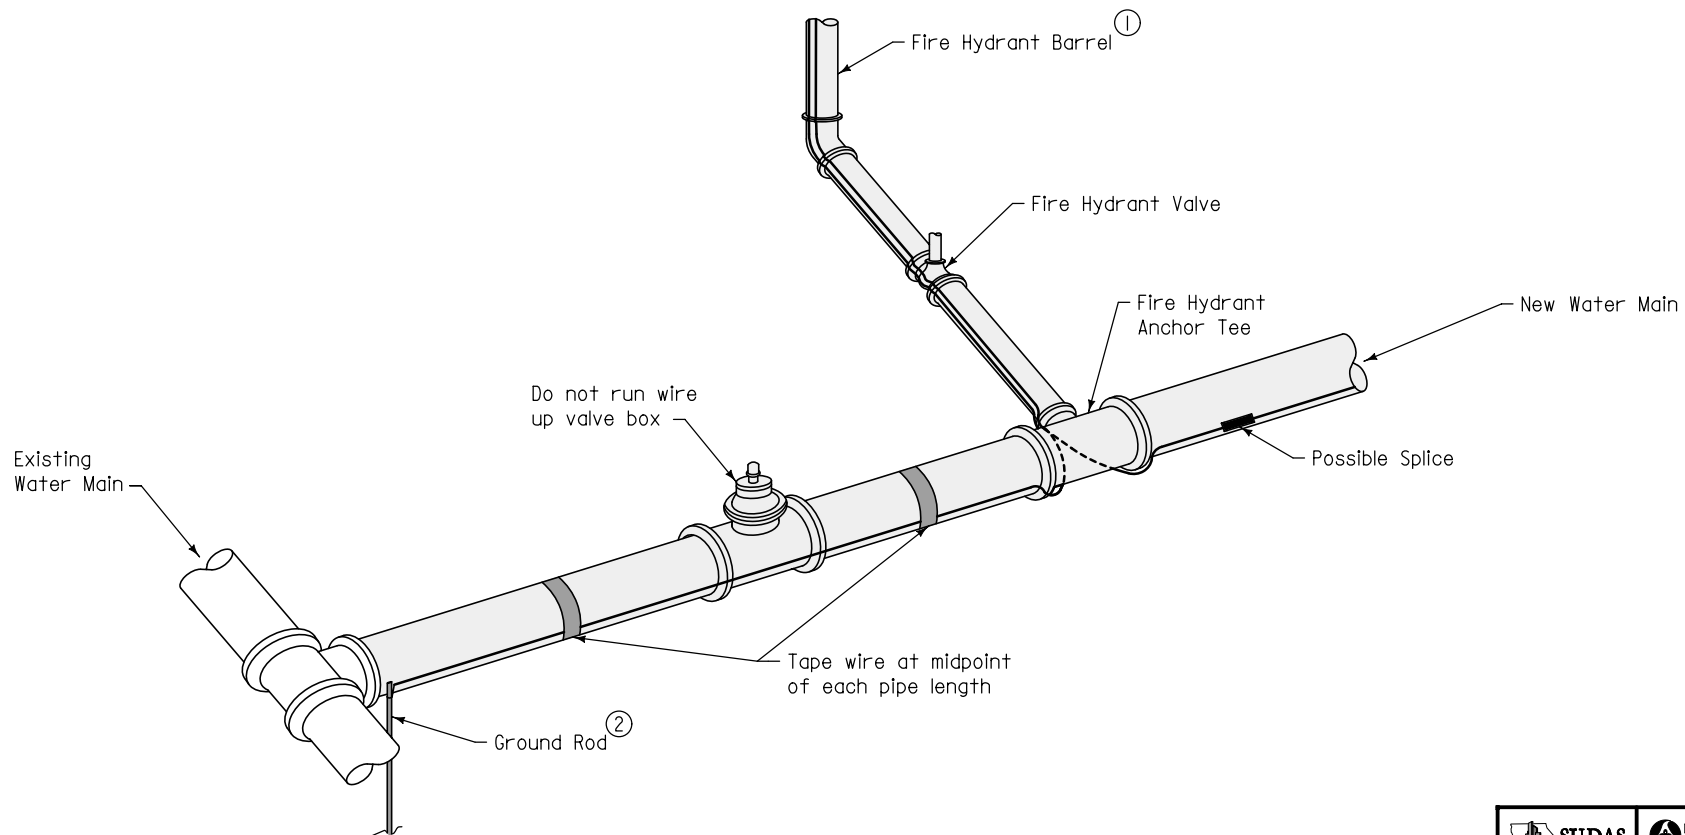

TYPICAL INSTALLATION

 SUDAS	 Iowa Department of Transportation	REVISION	
		NEW	04-21-09
		WM-102	
		SHEET 1 of 1	
		REVISIONS: New. Replaces SUDAS Figure 5010.3	
		 SUDAS DIRECTOR	
 DESIGN METHODS ENGINEER			
TRACER SYSTEM			