
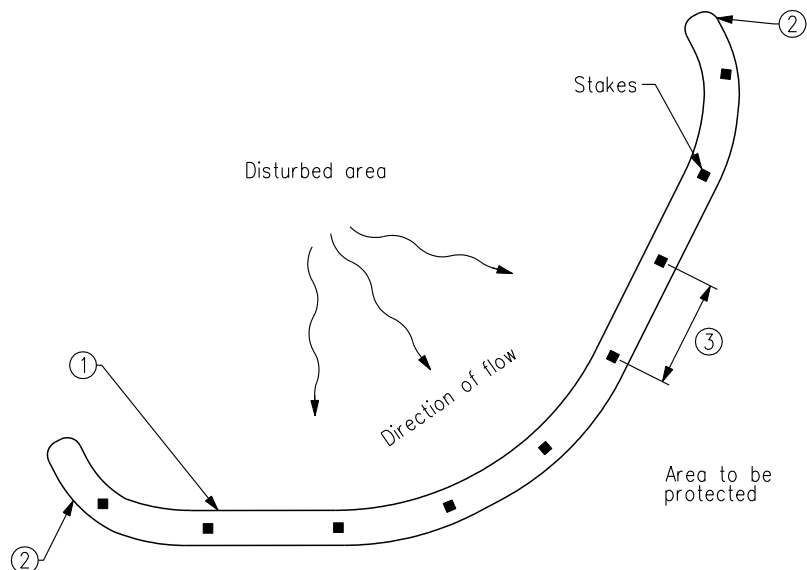
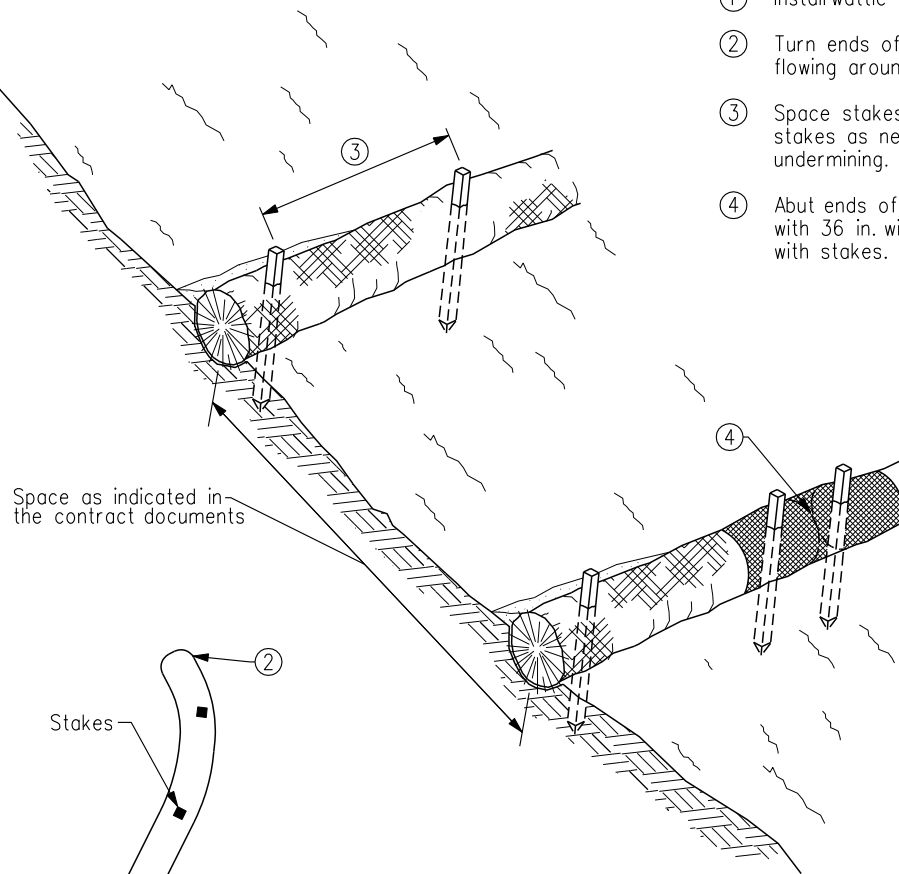


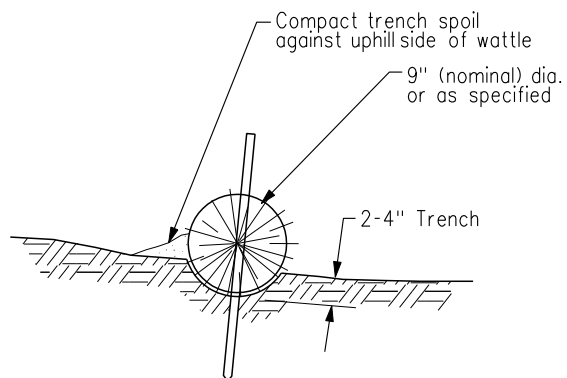

- ① Install wattle along contour of slope.
- ② Turn ends of wattle uphill to prevent water from flowing around ends.
- ③ Space stakes at 4 ft. max. Install additional stakes as necessary to prevent movement and undermining.
- ④ Abut ends of adjacent wattles tightly. Wrap joint with 36 in. wide section of silt fence and secure with stakes.

	REVISION	
	NEW	10/17/06
	FIGURE 9040.5	
	SHEET 1 OF 1	
WATTLE		