




PLAN VIEW

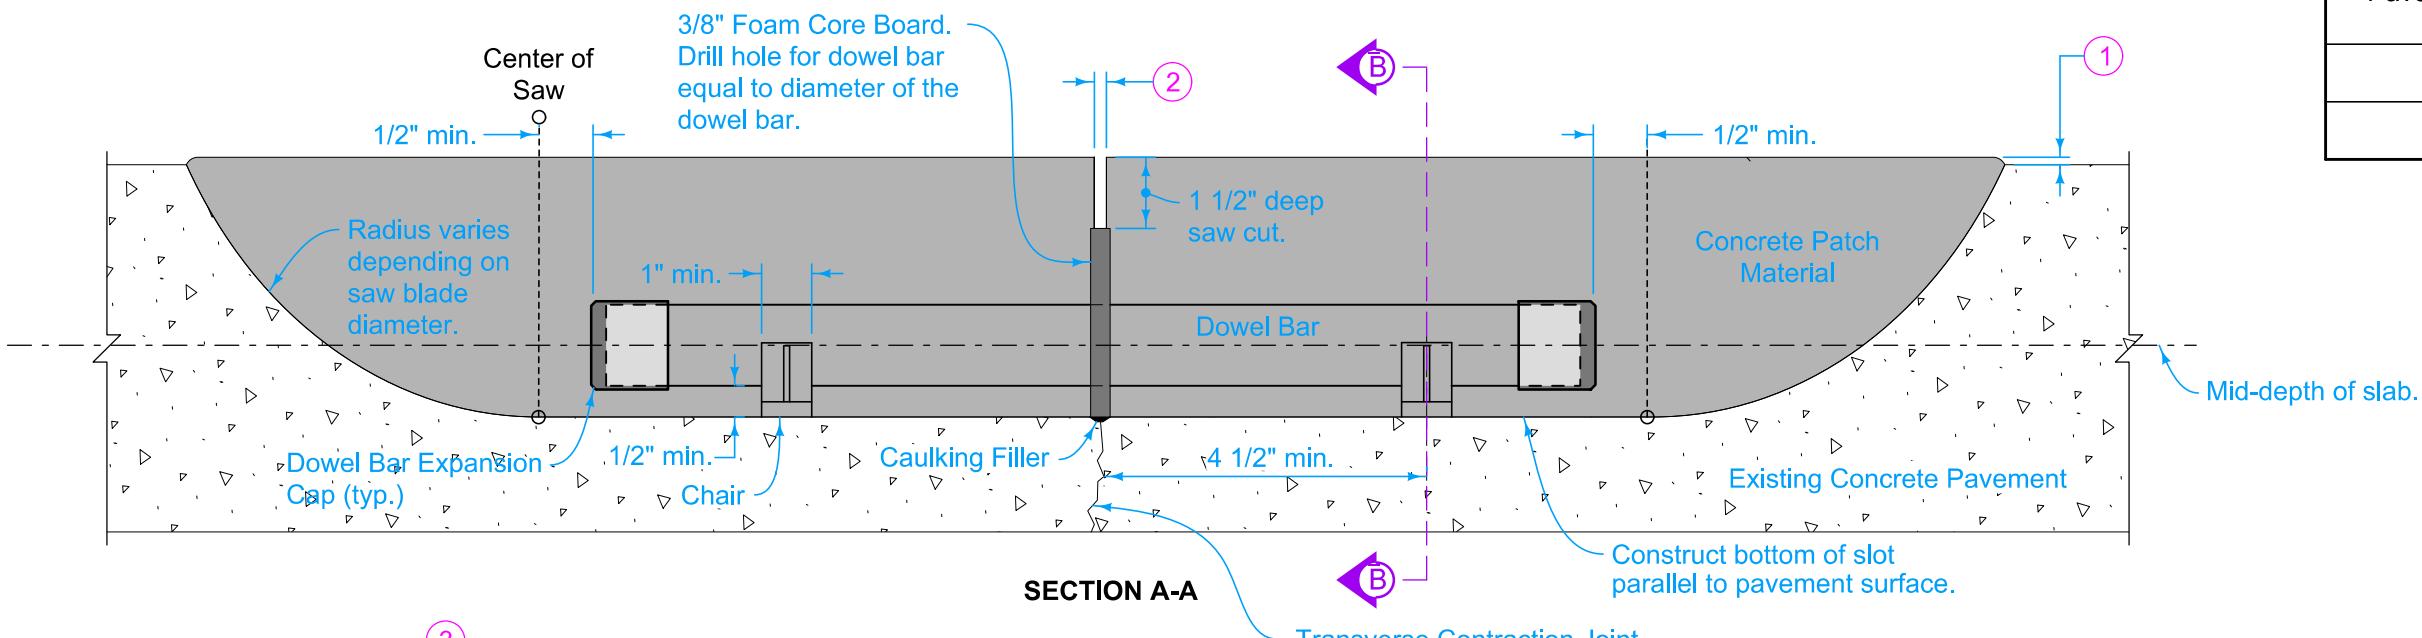

SECTION A-A

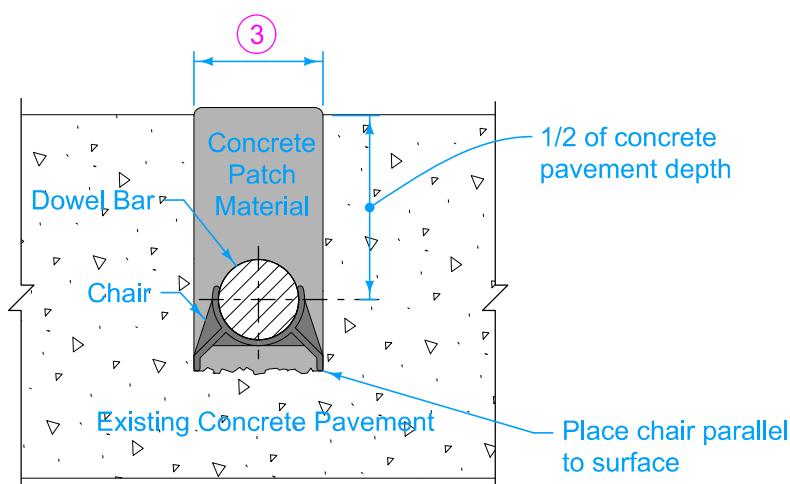

SECTION B-B

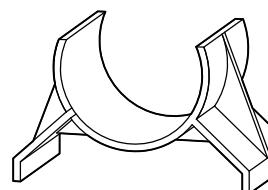

CHAIR DETAIL

- ① Extend concrete patch material 1/8" above existing concrete surface for projects to be diamond ground; construct flush if diamond grinding is not required.
- ② Sawcut joint width 3/16" min to 5/16" max. Saw after concrete patch material has set.
- ③ Cut slot width equal to chair width (min) to chair width + 1/8" (max).

DOWEL BAR DIAMETER

Pavement Thickness (inches)	Diameter (inches)
8 to 9 $\frac{1}{2}$	1 $\frac{1}{4}$
>10	1 $\frac{1}{2}$