


Revised 11-2025: In Elevation of Open Rail Layout details, corrected leader notes and added callouts to "End of Wing" and "Back Face of Abutment". (Was incorrectly showing back face of abutment at end of wing.)

Table of Open Rail Dimensions and Numbers

Span		20'-0"				30'-0"				40'-0"				50'-0"			
Skew		0°	15°	30°	45°	0°	15°	30°	45°	0°	15°	30°	45°	0°	15°	30°	45°
Dimensions or Number	A	31'-0"	31'-1 1/4"	31'-5 9/16"	32'-2 15/16"	41'-0"	41'-1 1/4"	41'-5 9/16"	42'-2 15/16"	51'-0"	51'-1 1/4"	51'-5 9/16"	52'-2 15/16"	61'-0"	61'-1 1/4"	61'-5 9/16"	62'-2 15/16"
	C	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4
	D	7'-4"	7'-4 7/16"	7'-5 7/8"	7'-9"	8'-0"	8'-0 5/16"	8'-1 3/8"	8'-3 3/4"	8'-4 13/16"	8'-5 1/16"	8'-5 15/16"	8'-7 13/16"	8'-8"	8'-8 3/16"	8'-8 15/16"	8'-10 1/2"
	E	8'-10"	8'-10 7/16"	8'-11 7/8"	9'-3"	9'-6"	9'-6 5/16"	9'-7 3/8"	9'-9 3/4"	9'-10 13/16"	9'-11 1/16"	9'-11 15/16"	10'-1 13/16"	10'-2"	10'-2 3/16"	10'-2 15/16"	10'-4 1/2"
	F	6	6	6	6	6	6	6	6	7	7	7	7	7	7	7	7

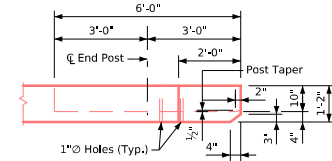

Part Plan of End Post

