4109
10-15-13

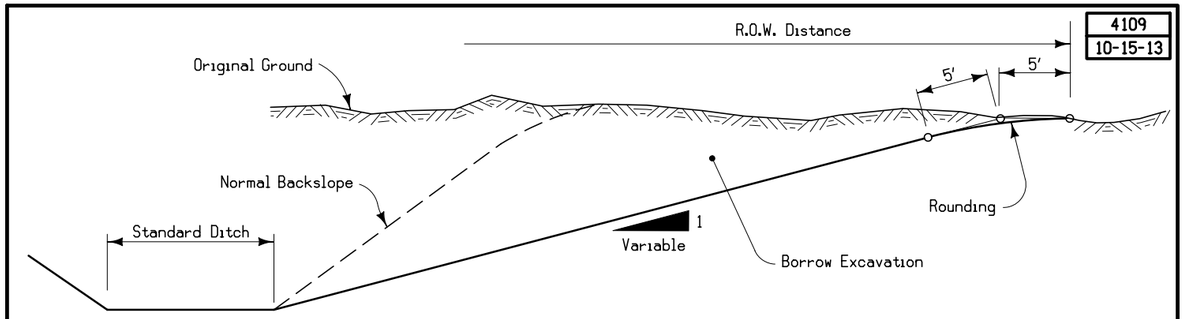

Use borrow backslope at those locations shown on plans or specifically required by the Engineer.

See Detail 4101 where intercepting ditches are required.

TYPICAL CROSS SECTION POSSIBLE BORROW IN R.O.W.